


# bosal

**Инструкция по монтажу  
тягово-цепного устройства  
шарового типа 1181 А  
для автомобилей  
Opel Astra J Sport Tourer**

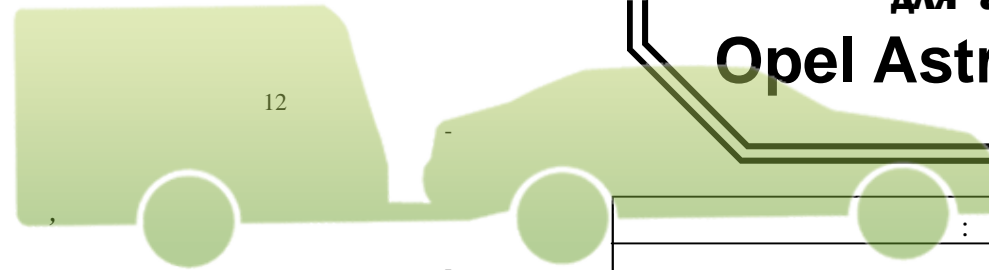

	10/2010—...
	2800
	1300
	75
D,	8,7
	17.3

**+7 (495) 6-693-693**

[www.magfarkop.ru](http://www.magfarkop.ru)  
[magfarkop@yandex.ru](mailto:magfarkop@yandex.ru)

462800,

18

:(35363) 7-05-06

/ : (35363) 7-13-20


(495) 785-66-07

[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)

« - »;  
" (8182) 22-48-15  
" 8(8442) 98-74-98  
" 8(343) 379-39-89, 373-42-73  
" 8(343) 26-88-308  
" 8(3952) 710-194  
" 8(495) 777-54-59  
" 8(495)745-79-11  
" 8(495) 788-95-97  
" 8(495) 720-51-03  
" 8(3532) 57-99-85  
" 8-905-899-5012  
" 8(383) 291-59-60  
" 8(831) 279-53-24  
" 8(3422) 98-27-20  
" 8(342) 220-87-87  
" 8-927-002-90-06  
" 8(3462) 24-00-44  
" 8(3842) 21-14-76  
" 8-902-940-4151  
" 8(3452) 32-22-12, 41-52-62  
" 8-961-213-0278  
" 8-917-347-1700  
" 8(351) 269-44-75, 900-72-73  
" 8(3512) 773-76-91

41.55-2005.

« »  
« » «D»

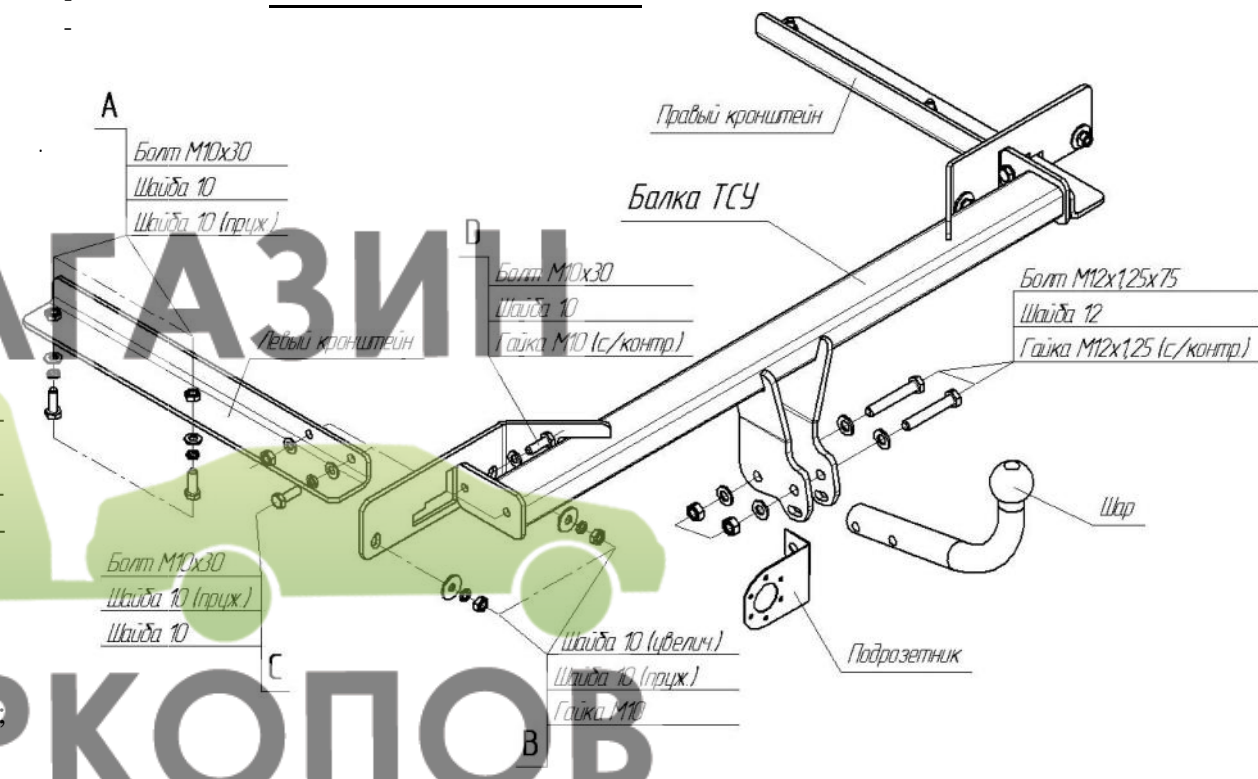


10 = 46 Nm ;

12 = 79 Nm.

**+7 (495) 6-693-693**

[www.magfarkop.ru](http://www.magfarkop.ru)  
[magfarkop@yandex.ru](mailto:magfarkop@yandex.ru)

1		
2		
3		
4		
5		
6		
7		

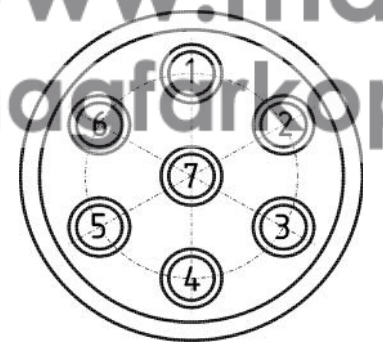

	1	1
12 1,25 75		2
10 30		8
12 1,25		2
10		6
Ø12		4
Ø10		10
Ø10		4
Ø10		10
VH0867		1
		1
		1
		1
		1