

bosal

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 2119 А
для автомобилей
VW Transporter T4**



	1996-2003
	2800
	1500
	75
D,	9,6
	19,2

+7 (495) 6-693-693

www.magfarkop.ru
magfarkop@yandex.ru



462800,

18

т. (35363) 7-05-06
ф. (35363) 7-13-20
(495) 799-13-46
www.bosal-autoflex.ru
www.bosal.com

« - - »:	(8182) 22-48-15
" - - "	" 8(8442) 98-74-98
" - - "	" 8(343) 379-39-89, 373-42-73
" - - "	" 8(343) 26-88-308
" - - "	" 8(3952) 710-194
" - - "	" 8(495) 777-54-59
" - - "	" 8(495)745-79-11
" - - "	" 8(495) 788-95-97
" - - "	" 8(495) 720-51-03
" - - "	" 8(3532) 57-99-85
" - - "	" 8-905-899-5012
" - - "	" 8(383) 291-59-60
" - - "	" 8(831) 279-53-24
" - - "	" 8(3422) 98-27-20
" - - "	" 8(342) 220-87-87
" - - "	" 8-927-002-90-06
" - - "	" 8(3462) 24-00-44
" - - "	" 8(3842) 21-14-76
" - - "	" 8-902-940-4151
" - - "	" 8(3452) 32-22-12, 41-52-62
" - - "	" 8-961-213-0278
" - - "	" 8-917-347-1700
" - - "	" 8(351) 269-44-75, 900-72-73
" - - "	" 8(3512) 773-76-91

41.55-2005.


МАГАЗИН



ФАРКОП

+7 (495) 6-693-693

www.magfarkop.ru
magfarkop@yandex.ru

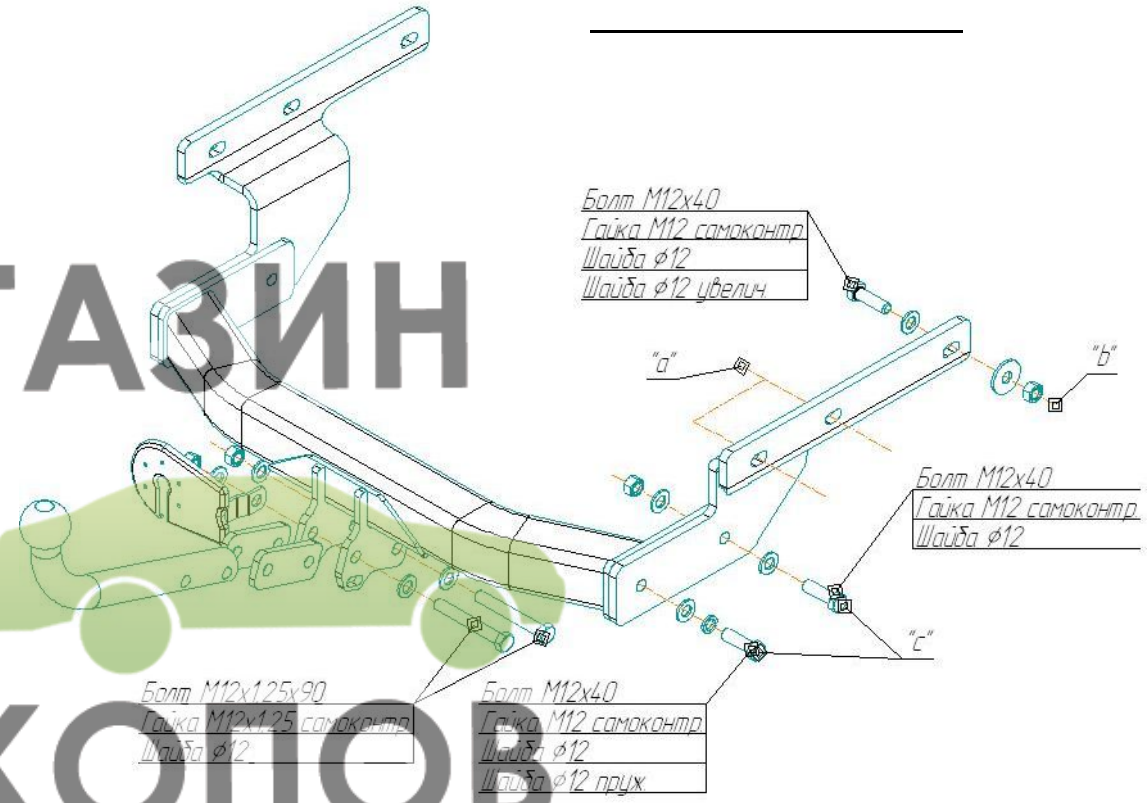


1		
2		
3		
4		
5		
6		
7		



1
2
1
1

Схема обрезки кабеля

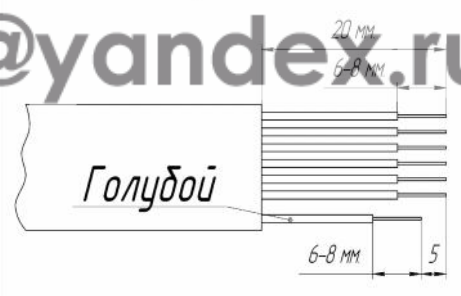

	3
12x1.25 /	2
12 /	4
12 1.25x90	2
12x40	6
12	12
12 ()	2
12	2
VH 0831	1
	2
	1
	1
	1
190	1
	1