


# bosal

## МАГАЗИН

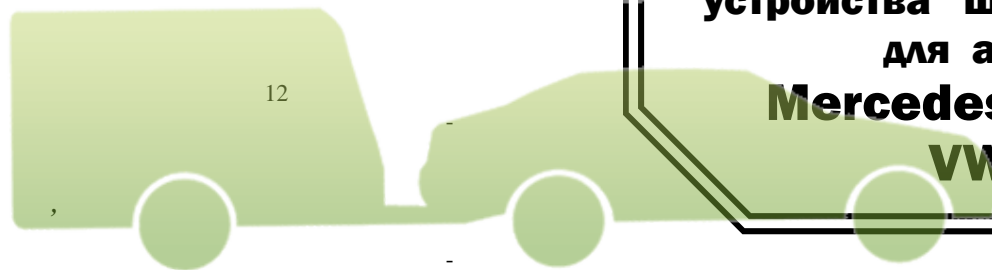

**Инструкция  
по монтажу тягово-сцепного  
устройства шарового типа 2250 F  
для автомобилей  
Mercedes-Benz Sprinter  
VW Crafter**

## ФАРКОПОВ

# +7 (495) 6-693-693

	2006 ...
	2000
	100
	26,93

[www.magfarkop.ru](http://www.magfarkop.ru)  
[magfarkop@yandex.ru](mailto:magfarkop@yandex.ru)




462800,

18

т. (35363) 7-05-06  
ф. (35363) 7-13-20  
(495) 799-13-46  
[www.bosal-autoflex.ru](http://www.bosal-autoflex.ru)  
[www.bosal.com](http://www.bosal.com)

« - »	(8182) 22-48-15
" " " " " "	" 8(8442) 98-74-98
" " " " " "	" 8(343) 379-39-89, 373-42-73
" " " " " "	" 8(343) 26-88-308
" " " " " "	" 8(3952) 710-194
" " " " " "	" 8(495) 777-54-59
" " " " " "	" 8(495) 745-79-11
" " " " " "	" 8(495) 788-95-97
" " " " " "	" 8(495) 720-51-03
" " " " " "	" 8(3532) 57-99-85
" " " " " "	" 8-905-899-5012
" " " " " "	" 8(383) 291-59-60
" " " " " "	" 8(831) 279-53-24
" " " " " "	" 8(3422) 98-27-20
" " " " " "	" 8(342) 220-87-87
" " " " " "	" 8-927-002-90-06
" " " " " "	" 8(3462) 24-00-44
" " " " " "	" 8(3842) 21-14-76
" " " " " "	" 8-902-940-4151
" " " " " "	" 8(3452) 32-22-12, 41-52-62
" " " " " "	" 8-961-213-0278
" " " " " "	" 8-917-347-1700
" " " " " "	" 8(351) 269-44-75, 900-72-73
" " " " " "	" 8(3512) 773-76-91

41.55-2005.

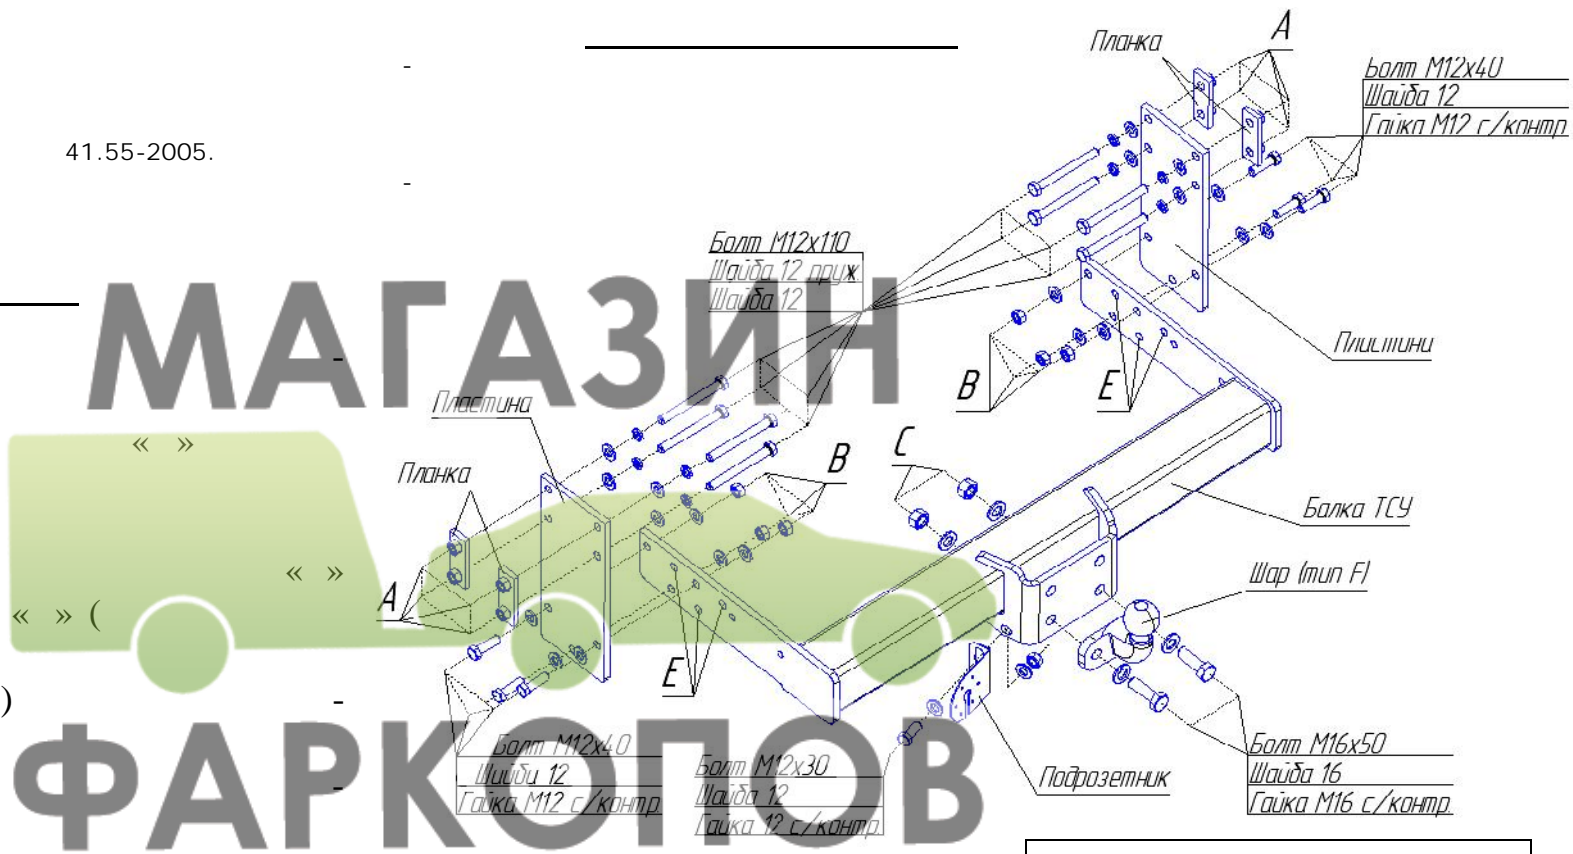


**+7 (495) 6-693-693**

1		
2		
3		
4		
5		
6		
7		



1	1
1	1
1	1

Схема обрезки кабеля

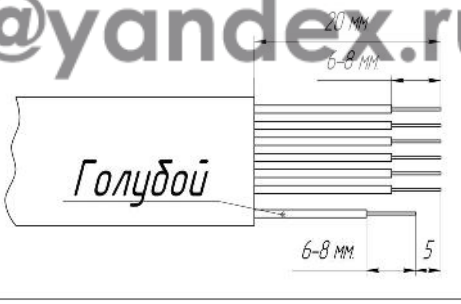

4	3
4	3
4	3
4 35	3
16 50	2
12x110	8
12 40	6
12 30	1
16 /	2
12 /	7
16	4
12	22
12 ( )	8
F	1
	4
	2
	1
	1
	1
190	1
	1

www.magfarkop.ru  
magfarkop@yandex.ru