

bosal

**Инструкция
по монтажу тягово-сцепного
устройства шарового типа 5259 А
для автомобилей
Chevrolet Cruze**



:	2009 - ...
:	1100
:	50
:	15,6

+7 (495) 6-693-693

www.magfarkop.ru
magfarkop@yandex.ru

462800,

18

:(35363) 7-05-06


/ : (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

« - »:
" (8182) 22-48-15
" 8(8442) 98-74-98
" 8(343) 379-39-89, 373-42-73
" 8(343) 26-88-308
" 8(3952) 710-194
" 8(495) 777-54-59
" 8(495)745-79-11
" 8(495) 788-95-97
" 8(495) 720-51-03
" 8(3532) 57-99-85
" 8-905-899-5012
" 8(383) 291-59-60
" 8(831) 279-53-24
" 8(3422) 98-27-20
" 8(342) 220-87-87
" 8-927-002-90-06
" 8(3462) 24-00-44
" 8(3842) 21-14-76
" 8-902-940-4151
" 8(3452) 32-22-12, 41-52-62
" 8-961-213-0278
" 8-917-347-1700
" 8(351) 269-44-75, 900-72-73
" 8(3512) 773-76-91

41.55-2005.

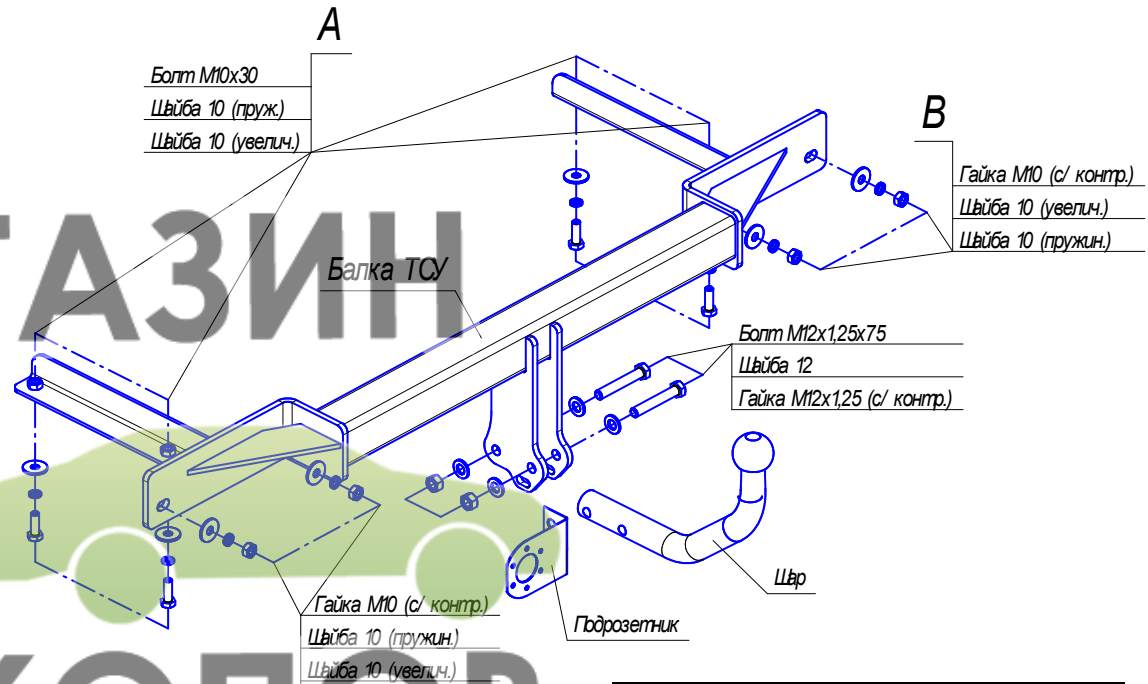


10 = 46 Nm, 12 = 79

МАГАЗИН ФАРКОПОВ


+7 (495) 6-693-693

1		
2		
3		
4		
5		
6		
7		

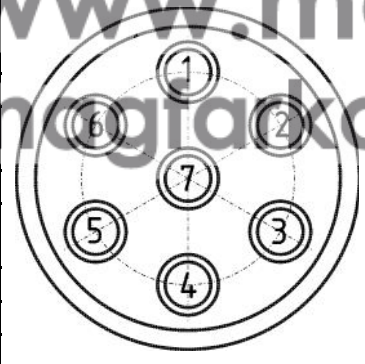

1
1
1

Схема обрезки кабеля

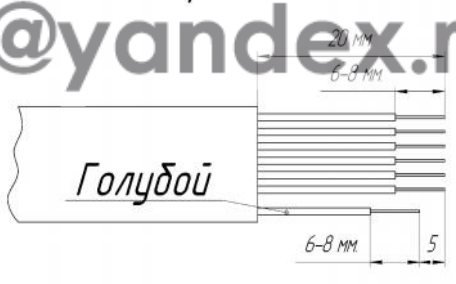

10	30	4
12	1,25 75	2
10	/	4
12	1,25 /	2
10	.	8
12		4
10	.	8
4	35	3
4		3
4	.	3
4		3
		1
	190	1
VH 0871		1
		1
		1
		1
		1

www.magfarkop.ru
magfarkop@yandex.ru