


bosal

МАГАЗИН

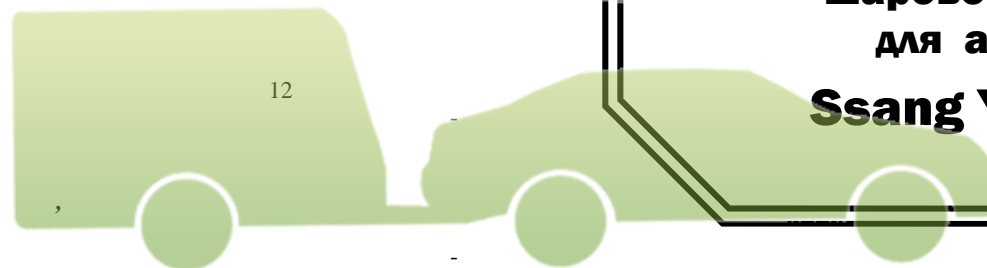

**Инструкция по монтажу
тягово-сцепного устройства
шарового типа 6405 А
для автомобилей
Ssang Yong Rexton**

ФАРКОПОВ

+7 (495) 6-693-693

www.magfarkop.ru
magfarkop@yandex.ru



462800,

« - »
18

:(35363) 7-05-06

/ : (35363) 7-13-20

(495) 785-66-07

www.bosal-autoflex.ru

	2003-...
	1500
	75
	18.0

	« - »:
.	" (8182) 22-48-15
.	" 8(8442) 98-74-98
.	" 8(343) 379-39-89, 373-42-73
.	" 8(343) 26-88-308
.	" 8(3952) 710-194
.	" 8(495) 777-54-59
.	" 8(495) 745-79-11
.	" 8(495) 788-95-97
.	" 8(495) 720-51-03
.	" 8(3532) 57-99-85
.	" 8-905-899-5012
.	" 8(383) 291-59-60
.	" 8(831) 279-53-24
.	" 8(3422) 98-27-20
.	" 8(342) 220-87-87
.	" 8-927-002-90-06
.	" 8(3462) 24-00-44
.	" 8(3842) 21-14-76
.	" 8-902-940-4151
.	" 8(3452) 32-22-12, 41-52-62
.	" 8-961-213-0278
.	" 8-917-347-1700
.	" 8(351) 269-44-75, 900-72-73
.	" 8(3512) 773-76-91

41.55-2005.

()
18 (

(L=85mm).

M12x40


M12x90.

M12x120.

+7 (495) 6-693-693



www.magfarkop.ru
magfarkop@yandex.ru

1		
2		
3		
4		
5		
6		
7		

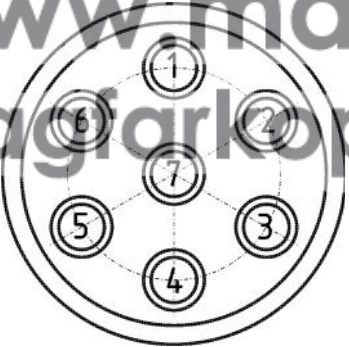

	1
	1
	1
	1
	1

Схема обрезки кабеля

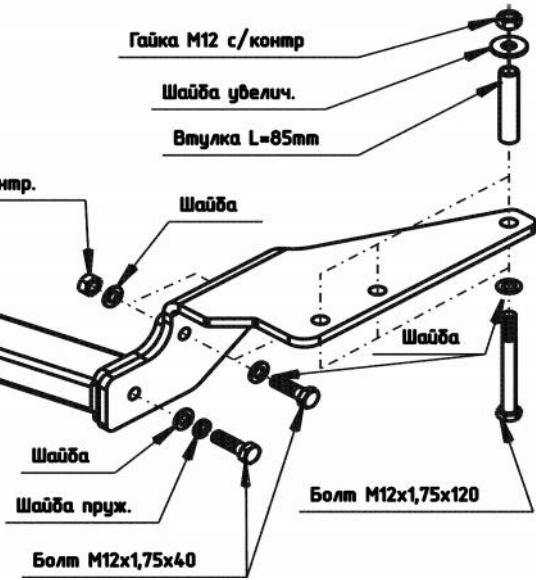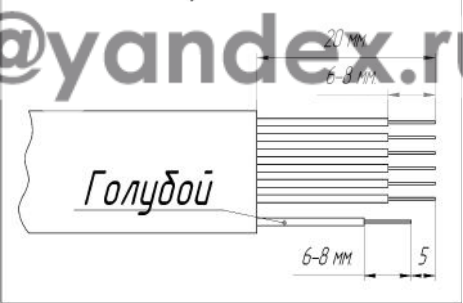

	3
12 1,25 90	2
12 120	6
12 40	6
12 1,25 /	2
12 /	10
12 65 ()	2
12	19
12	6
L - 85	6
	2
VH 0137	1
	1
	1
	1
	1
190	1
	1