

M8x40 - 1ks
M10x100 - 4ks
M12x70 - 2ks (A)
M12x90 - 2ks (I)
M12x19 - 4ks (C)



MS8 - 1ks



M10 - 2ks
M12 - 2ks (A, I)



PP8 - 1ks
PP10 - 4ks
PP12 - 2ks (A, I)
PP12 - 4ks (C)




P11 - 6ks




PR14 - 1ks


C

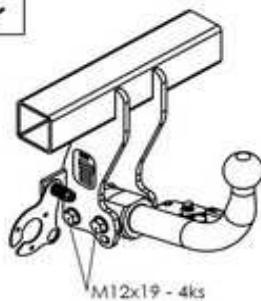

DETAIL

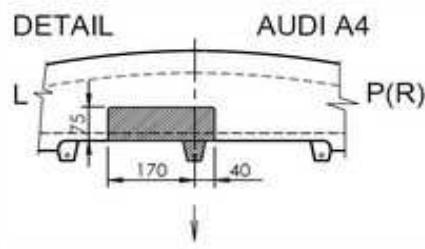


AUDI A4

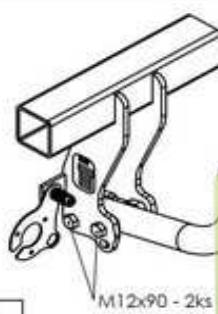

МАГАЗИН

I

AIC 400 12 3

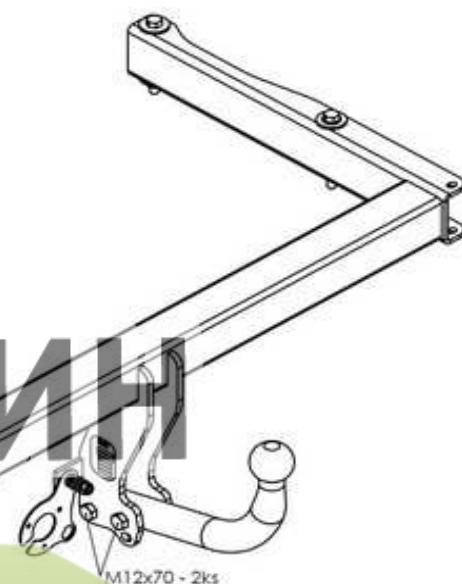

A

AUDI A4, AUDI A4 KOMBI, AUDI A4 ALLROAD,
AUDI A5, AUDI A5 SPORTBACK
Kód: A0475(A,I,C) 14. 6. 2012

ФАРКОПОВ

Код: A0475(A,I,C)

NÁVOD NA MONTÁŽ:

- 1. Uvoľnite čalúnenie. Demontujte zadné svetlá. ■ 2. Demontujte zadný plastový nárazník s kovovou výstuhou nárazníka. Odstráňte hliníkové konzoly z plechovej výstuhy nárazníka. Uvoľnite výfuk. ■ 3. Odlepte fólie montážnych otvorov na pozdižných nosníkoch vozidla. Nasuňte rám do nosníkov karosérie. Do montážnych otvorov vložte spojovací materiál podľa obrázka a následne všetky skrutkové spoje utiahnite momentom podľa tabuľky. ■ 4. Vyrezte vybrania do spodného plastu nárazníka podľa obrázka – DETAIL. ■ 5. Elektroinstaláciu zapojte podľa návodu. ■ 6. Skontrolujte správnosť pripojenia elektroinstalácie. ■ 7. Na tažnej zariadení namontujte plechovú výstuhu nárazníka. Namontujte späť zadný plastový nárazník. ■ 8. Prevedte spätnú montáž demontovaných častí. ■ 9. Dotiahnite skrutky spojovacej gule (držiaka spojovacej gule) momentom podľa tabuľky.

FITTING INSTRUCTIONS:

- 1. Release the upholstery. Remove back lights. ■ 2. Dismount bumper and metallic reinforcement beam of bumper. Remove the bracket from aluminum sheet metal bumper reinforcement. Loosen the exhaust. ■ 3. Peel off foils covering assembly openings on the longitudinal bars of the vehicle. Slide the frame into the body bars. Put the joining material into the assembly openings as shown in the Picture and then torque all the screw connections as shown in the table. ■ 4. Cut out the removal in to the under plastic cover bumper – picture DETAIL. ■ 5. Connect the electrical installation as described in the instructions for use. ■ 6. Make sure the electrical installation is properly connected. ■ 7. The trailer hitch mount with metal bumper reinforcement. Re-mount the bumper. ■ 8. Reassemble any removed parts. ■ 9. Tighten the screws of the linkage ball (holder of the linkage ball) to the torque shown in the table.

ДОЛЕЖИТЕ УПОЗОРНENIA:

- V miestach stykových plôch sa musí odstrániť pružná ochrana karosérie vozidla.
- Vŕtané otvory treba ošetriť antikoróznom hmotou.
- Použite len dodaný spojovací materiál v predpisanej triede kvality.
- Elektrické zariadenie sa namontuje podľa podmienok prevádzky cestných vozidiel na pozemných komunikáciach.
- Údaj S o maximálnom zvislom zaťažení na gulu je uvedený na výrobnom štítku tažného zariadenia.
- Na tažnom zariadení nie je možné nič upravovať ani meniť.
- Pred ukončením montáže je nutné prekontrolovať všetky spoje podľa tabuľky utáhovacích momentov!
- V prípade akýchkoľvek nejasností je nutné obrátiť sa na výrobcu tažného zariadenia.
- Výrobca nenesie zodpovednosť za škody spôsobené nesprávnym použitím výrobku.

IMPORTANT ATTENTIONS:

- Remove insulating material on a car body in grips and joints of a coupling device with a car body.
- Put the anticorrosive substance on the drilled holes.
- Use supplied mechanical strength jointing material.
- Wiring of a coupling device must be up to a standard and car maker requirements.
- Statement S about the maximum vertical ball downtime is printed on the tow bar label.
- On the tow bar is no modification possible
- Check all the joints, look in the table of the spinning moments, before finishing the montage!
- Contact the tow bar marker with any questions.
- The manufacturer is not responsible for the damages caused by wrong using on the product.

Tabuľka utáhovacích momentov skrutkových spojov pevnosti 8.8 / Table of specified torque and hardenss settings 8.8

M6 - 9,5Nm, M8 - 23Nm, M10 - 46Nm, M10x1,25 - 49Nm, M12 - 79Nm, M12x1,25 - 87Nm, M12x1,5 - 83Nm, M14 - 125Nm, M16 - 195Nm