

M8x40 - 1ks  
M10x25 - 4ks  
M10x40 - 4ks  
M12x30 - 4ks  
M12x90 - 2ks (I)  
M12x19 - 4ks (C)



MS8 - 1ks  
M12 - 6ks (I)  
M12 - 4ks (C)



P10 - 1ks  
PP10 - 8ks  
PP12 - 6ks (I)  
PP12 - 8ks (C)




P9 - 8ks




PR14 - 1ks

C

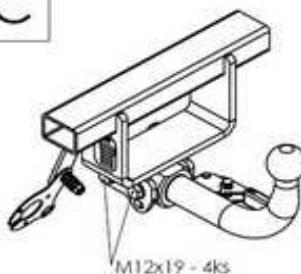

#### DETAIL

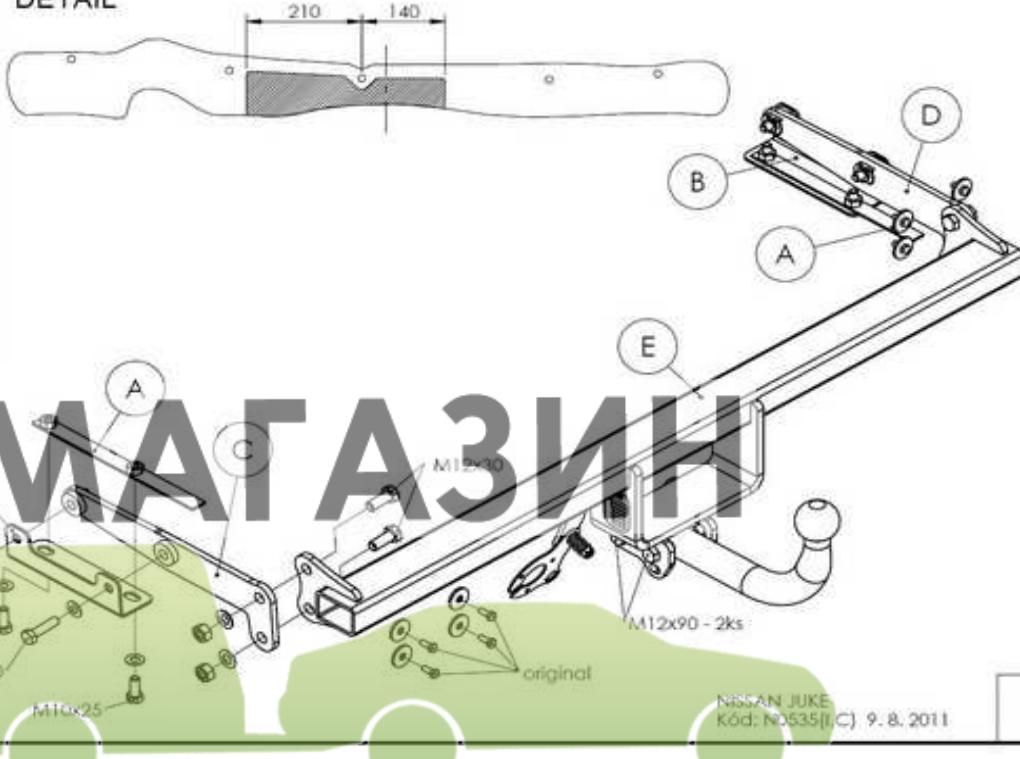

IC 400 0 3

NISSAN JUKE  
Kód: N0535(I,C) 9. 8. 2011

I

# ФАРКОПОВ

#### НÁVOD NA MONTÁŽ:

Kód: N0535(I,C)

- 1. Uvoľnite zadné svetlá. ■ 2. Demontujte zadný plastový nárazník s kovovou výstuhou nárazníka. Skrutky naskrutujte späť s použitím podložiek P9. Kovová výstuba sa už nepoužije. Uvoľnite výfuk. ■ 3. Tažné zariadenie montujte po častiach podľa obrázka. Najprv k pozdĺžnym nosníkom priskrutujte záhka postranné konzoly A, B, C, D, na ktoré následne prichytiť rám E. Do montážnych otvorov vložte spojovací materiál podľa obrázka a následne všetky skrutkové spoje utiahnite momentom podľa tabuľky. ■ 4. Vyrežte vybranú do spodného plastu podľa obrázka – DETAIL. ■ 5. Elektroinstaláciu zapojte podľa návodu. ■ 6. Skontrolujte spravnosť pripojenia elektroinstalácie. ■ 7. Namontujte späť spodné plasty, zadný plastový nárazník bez kovovej výstuhu, ktorú nahradza rám tažného zariadenia. ■ 8. Prevedte spätnú montáž demontovaných častí. ■ 9. Dotiahnite skrutky spojovacej gule (držiaka spojovacej gule) momentom podľa tabuľky.

#### FITTING INSTRUCTIONS:

- 1. Remove back lights. ■ 2. Dismount bumper and metallic reinforcement beam of bumper. Screw the screws back to using pads P9. The beam will no longer be used. Loosen the exhaust. ■ 3. Install the tow-bar in parts as shown in the picture. First, screw the A, B, C, D, side consoles freely onto the longitudinal bars and then join the E frame to these consoles. Put the joining material into the assembly openings as shown in the picture and then torque all the screw connections as shown in the table. ■ 4. Cut out the removal in to the under plastic cover – picture DETAIL. ■ 5. Connect the electrical installation as described in the instructions for use. ■ 6. Make sure the electrical installation is properly connected. ■ 7. Re-mount the bottom plastic covers and bumper without reinforcement beam. It is supplied now with the tow bar. ■ 8. Reassemble any removed parts. ■ 9. Tighten the screws of the linkage ball (holder of the linkage ball) to the torque shown in the table.

#### ДОЛЕЖИТЕ УПОЗОРНЕНИЯ:

- V miestach stykových plôch sa musí odstrániť pružná ochrana karosérie vozidla.
- Vŕtané otvory treba ošetriť antikoróznom hmotou.
- Použite len dodaný spojovací materiál v predpisanej triede kvality.
- Elektrické zariadenie sa namontuje podľa podmienok prevádzky cestných vozidiel na pozemných komunikáciach.
- Údaj S o maximálnom zvislom zaťažení na gulu je uvedený na výrobnom štítku tažného zariadenia.
- Na tažnom zariadení nie je možné nič upravovať ani meniť.
- Pred ukončením montáže je nutné prekontrolovať všetky spoje podľa tabuľky utahovacích momentov!
- V prípade akýchkoľvek nejasností je nutné obrátiť sa na výrobcu tažného zariadenia.
- Výrobca nenesie zodpovednosť za škody spôsobené nesprávnym použitím výrobku.

#### IMPORTANT ATTENTIONS:

- Remove insulating material on a car body in grips and joints of a coupling device with a car body.
- Put the anticorrosive substance on the drilled holes.
- Use supplied mechanical strength jointing material.
- Wiring of a coupling device must be up to a standard and car maker requirements.
- Statement S about the maximum vertical ball downtime is printed on the tow bar label.
- On the tow bar is no modification possible
- Check all the joints, look in the table of the spinning moments, before finishing the montage!
- Contact the tow bar marker with any questions.
- The manufacturer is not responsible for the damages caused by wrong using on the product.

Tabuľka utahovacích momentov skrutkových spojov pevnosti 8.8 / Table of specified torque and hardenss settings 8.8

**M6 - 9,5Nm, M8 - 23Nm, M10 - 46Nm, M10x1,25 - 49Nm, M12 - 79Nm, M12x1,25 - 87Nm, M12x1,5 - 83Nm, M14 - 125Nm, M16 - 195Nm**