



C

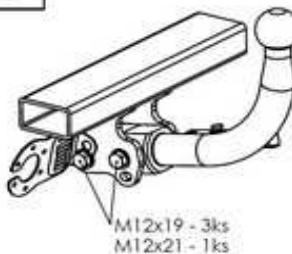

M12x19 - 3ks  
M12x21 - 1ks

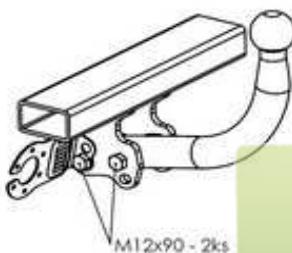

M12x90 - 2ks

**МАГАЗИН**

A/C 400 12.4

PEUGEOT 308 SW [KOMBI]  
Kód: P0415(A,I,C) 28.9.2011

A

#### NÁVOD NA MONTÁŽ:

Kód: P0415(A,I,C)

- 1. Demontujte 2 skrutky spodných úchytov plastového nárazníka a 4 spodné skrutky M8x25 z kovovej výstuhy nárazníka. ■ 2. Odstráňte plastové kryty z otvorov v spodných stenach pozdĺžnych nosníkov vozidla. ■ 3. Tažné zariadenie montujte podľa obrázka. Zliahka hamontujte konzoly A a B, na ne prichyťte rám C. Skrutkové spoje dotiahnite momentom podľa tabuľky. ■ 4. Namontujte späť spodné držiaky nárazníka. ■ 5. Elektroinštaláciu zapojte podľa návodu. ■ 6. Skontrolujte správnosť pripojenia elektroinštalácie. ■ 7. Skontrolujte dotiahnutie skrutiek spojovacej gule (držiaka spojovacej gule) momentom podľa tabuľky.

#### FITTING INSTRUCTIONS:

- 1. Remove the 2 screws of the lower holders of the plastic bumper and the 4 lower M8x25 screws from the metal bumper reinforcement. ■ 2. Loosen the bottom plastic covers. ■ 3. Install the tow-bar as shown in the picture. Gently install the brackets A and B, not to snap the frame C. Torque all the screw connections as shown in the table. ■ 4. Replace the lower bumper holders. ■ 5. Connect the electrical installation as described in the instructions for use. ■ 6. Make sure the electrical installation is properly connected. ■ 7. Make sure the screws of the linkage ball (holder of the linkage ball) are torqued as shown in the table.

#### DÔLEŽITÉ UPOZORNENIA:

- V miestach stykových plôch sa musí odstrániť pružná ochrana karosérie vozidla.
- Vŕtané otvory treba ošetriť antikoróznom hmotou.
- Použiť len dodaný spojovací materiál v predpisanej triede kvality.
- Elektrické zariadenie sa namontuje podľa podmienok prevádzky cestných vozidiel na pozemných komunikáciach.
- Údaj S o maximálnom zvislom zaťažení na gulú je uvedený na výrobnom štítku tažného zariadenia.
- Na tažnom zariadení nie je možné nič upravovať ani meniť.
- Pred ukončením montáže je nutné prekontrolovať všetky spoje podľa tabuľky uťahovacích momentov!
- V prípade akýchkoľvek nejasností je nutné obrátiť sa na výrobcu tažného zariadenia.
- Výrobca nenesie zodpovednosť za škody spôsobené nesprávnym použitím výrobku.

#### IMPORTANT ATTENTIONS:

- Remove insulating material on a car body in grips and joints of a coupling device with a car body.
- Put the anticorrosive substance on the drilled holes.
- Use supplied mechanical strength jointing material.
- Wiring of a coupling device must be up to a standard and car maker requirements.
- Statement S about the maximum vertical ball downtime is printed on the tow bar label.
- On the tow bar is no modification possible
- Check all the joints, look in the table of the spinning moments, before finishing the montage!
- Contact the tow bar marker with any questions.
- The manufacturer is not responsible for the damages caused by wrong using on the product.

Tabuľka uťahovacích momentov skrutkových spojov pevnosti 8.8 / Table of specified torque and hardenss settings 8.8

**M6 - 9,5Nm, M8 - 23Nm, M10 - 46Nm, M10x1,25 - 49Nm, M12 - 79Nm, M12x1,25 - 87Nm, M12x1,5 - 83Nm, M14 - 125Nm, M16 - 195Nm**